
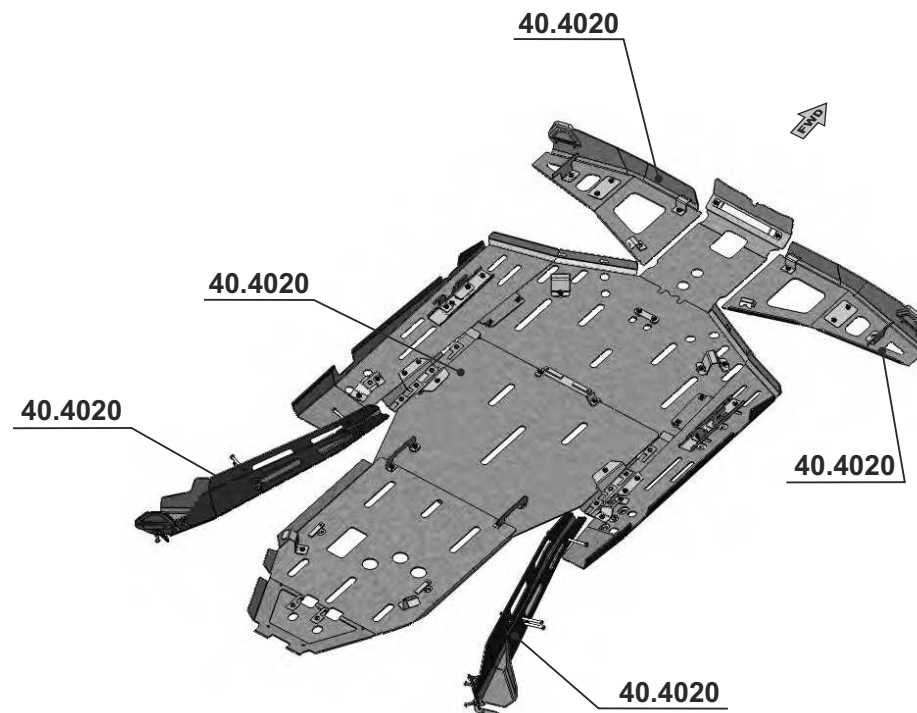


POLARIS RZR 1000 TURBO S

Material: Aluminium

Main parts of skid plate set

Part name	Part number	Fitting
Main part	40.4020	1) 1x Threaded insert 2) 4x Hook 3) 2x Threaded insert 4) 2x Hook 5) 1x Threaded insert 6) 2x Clamp 7) 2x Bracket 8) 2x Hook 9) 2x Hook 10) 1x Bracket 11) 4x SD 3007 12) 12x Threaded insert 13) 2x Bracket 14) 2x Bracket 15) 2x Hook 16) 2x Hook 17) 2x Bracket 2x Bolt M8x60 6x Bolt M8x70 60x Screw M8x20 8x Screw M8x25 4x Nut But M8 10x Nut M8 32x Washer 8 DIN 127 6x Washer 8 DIN 125 A 42x Washer 8 DIN 9020 34x SD 28000

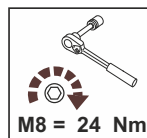

Instructions for installing of skid plate set on SSV

1. Remove the standard plastic cover from the SSV.
2. According to the presented scheme, install in related places brackets, hooks and clamps in pos. 1, 5, 6, 7, 10, 13, 14, 15, 16, 17.
3. Install on created mounting points the bottom protection elements, front and rear a-arm protections, using the fasteners shown in the diagram.
4. Tighten fasteners according torque specification shown on picture.

