




INSTALLATION INSTRUCTION



40.MP0844

Rear bumper


для TGB Blade 600 LTX EPS, 600, 2022-

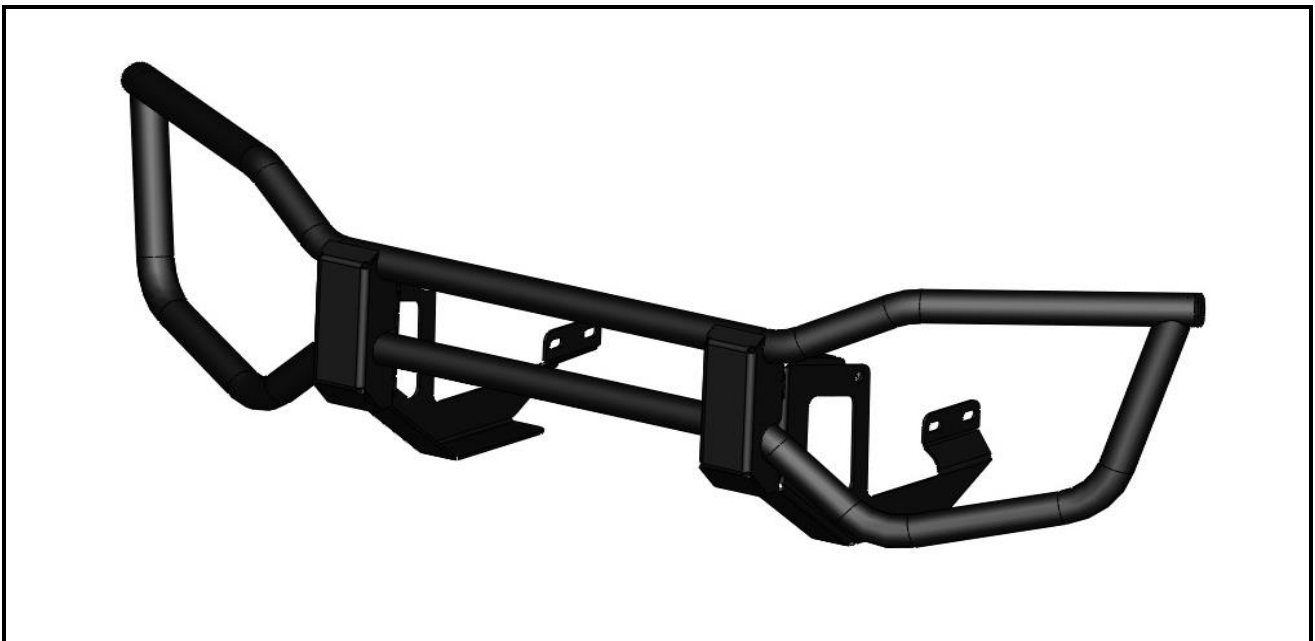


Tools:

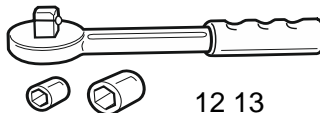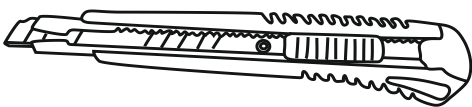


12 13

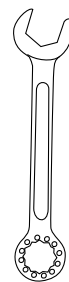

12 13

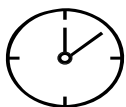

Installation time: 15-20 min

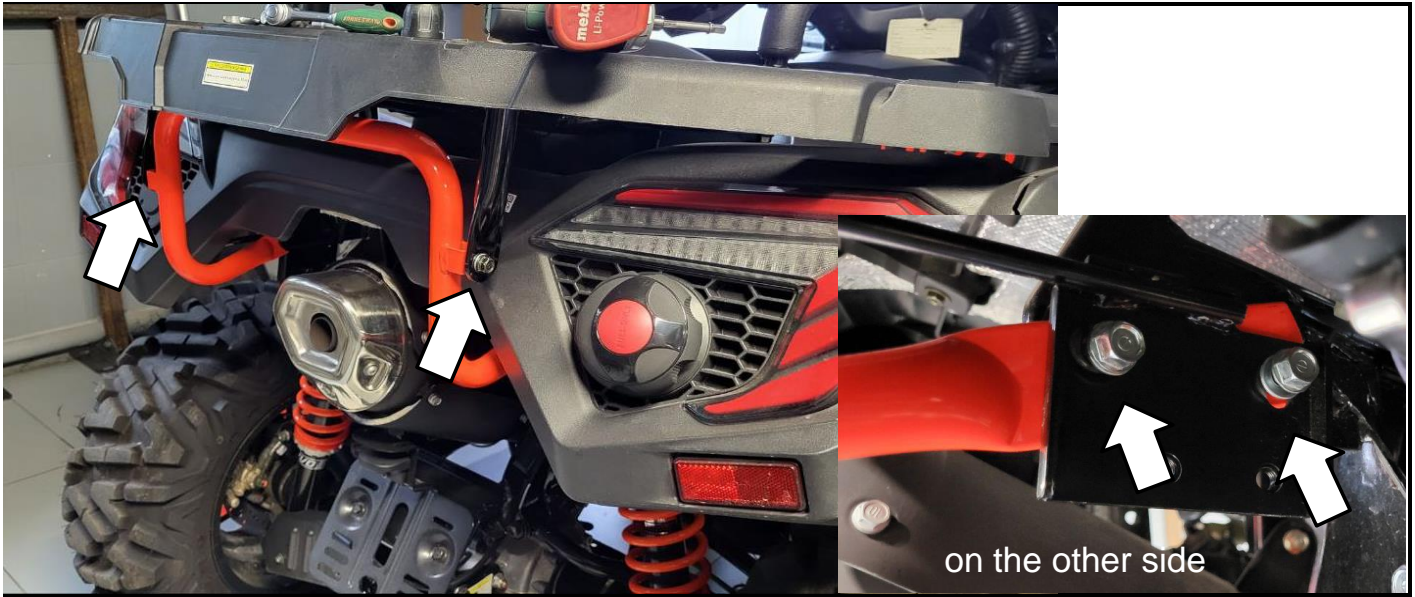

1


Remove 6 bolts indicated by arrows and remove factory bumper.



2

Install the left and right brackets as shown. Use fasteners: Bolt 8, Grover 8, Washer 8.



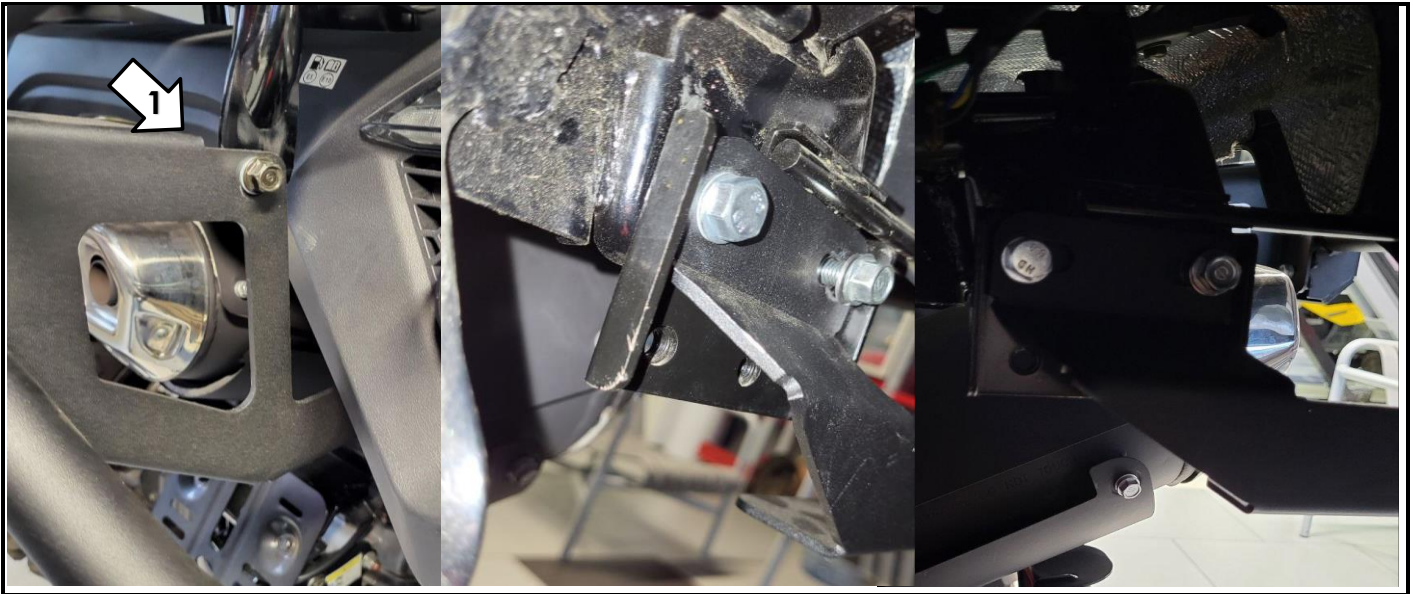

3

Install the STORM rear bumper on the standard brackets as shown (do not forget to fix the plastic bracket). Use standard fasteners. In places 1 - Nut 8, Washer 8.



4

Adjust and tighten all previously used fasteners.

Congratulations, your STORM rear bumper is installed!

