

Manual for installation Radiator relocation kit and snorkels kit

CFMOTO ZFORCE800
CFMOTO ZFORCE1000

MP0381, MP0304 - Radiator relocation and Snorkel kits



Remove the hood



Unscrew and remove the front box



Drain the antifreeze



Unscrew the radiator mount and expansion tank





Unscrew hose filler neck



Unplug the temperature sensor connector and disconnect the connector of the radiator fan



Remove hose filler neck, right hoses
Remove oil radiator hoses




Unscrew radiator hoses under the UTV




Remove radiator hoses under the UTV




Unscrew and remove upper hose on engine

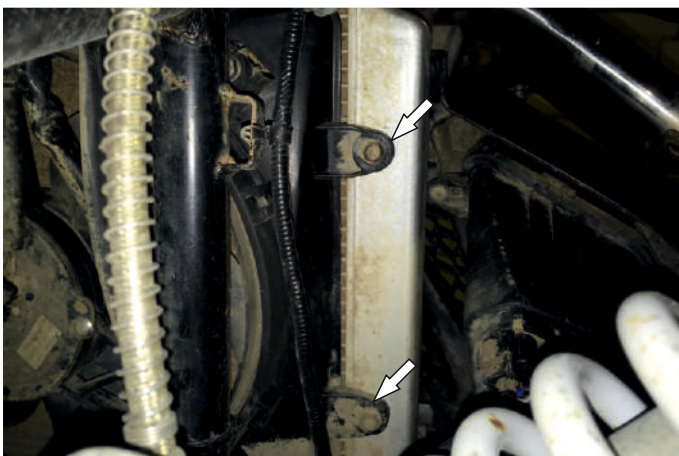

Unscrew the radiator fan

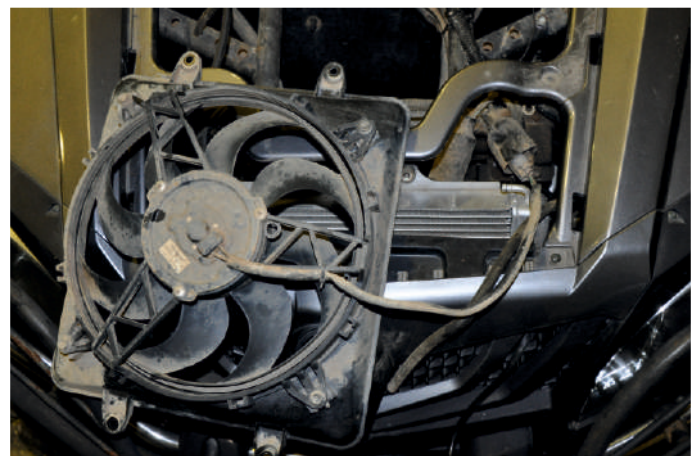

Remove the radiator fan over the hood

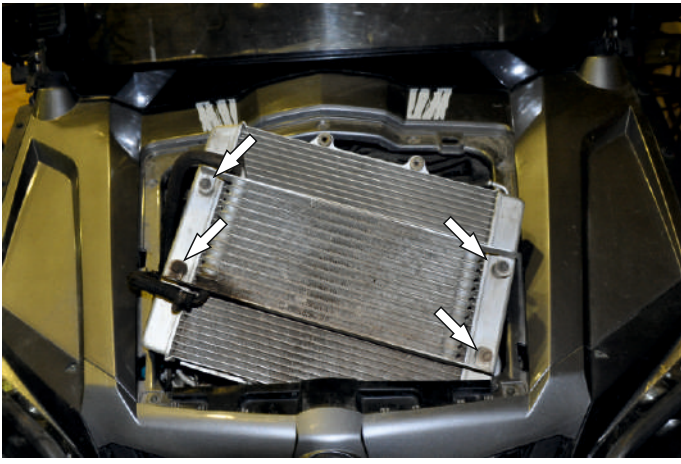

Remove the radiator over the hood



Remove the central interior panel




Unscrew the upper safety belts bolts




Unscrew and remove lower hose on engine



Install and tighten the relocation box

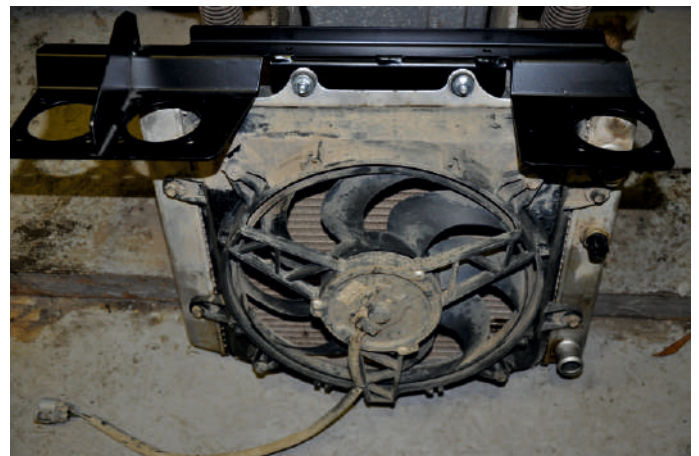

Install the fan on the radiator

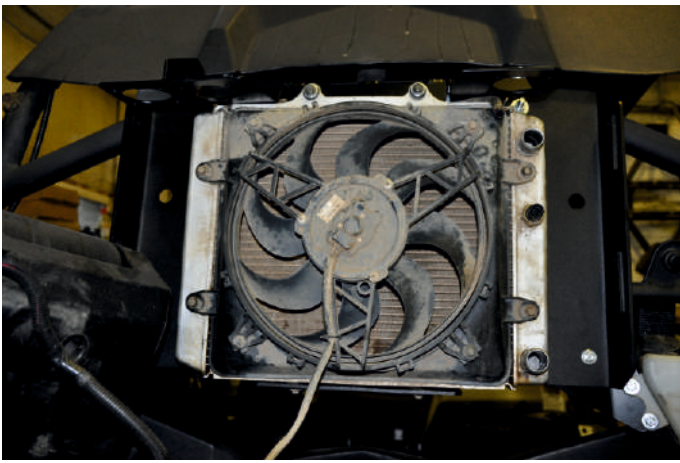

Assemble the relocation box.
Attach safety belts to home position.



The snorkel panel




Install the snorkel panel




Cut the hose for good assemble




Cut the hose for good assemble

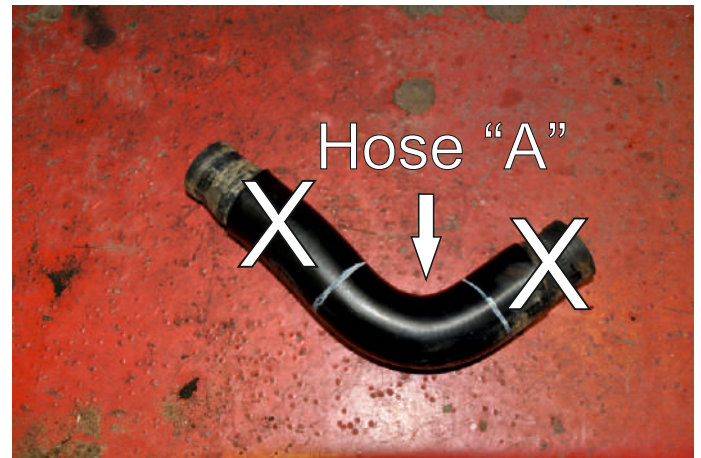

Cut the hose for good assemble

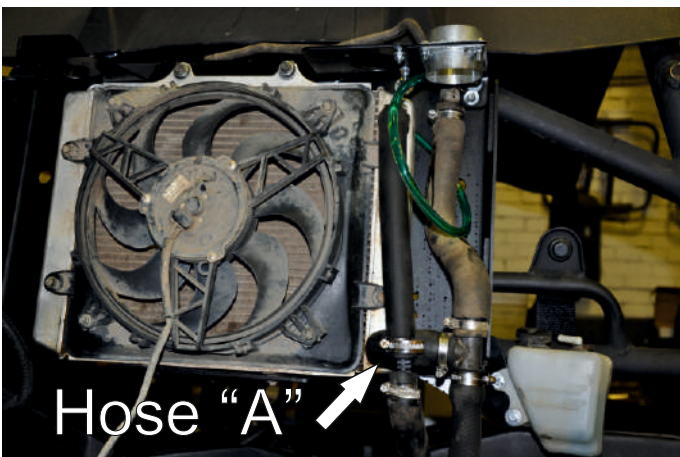

Assemble the hose "A"

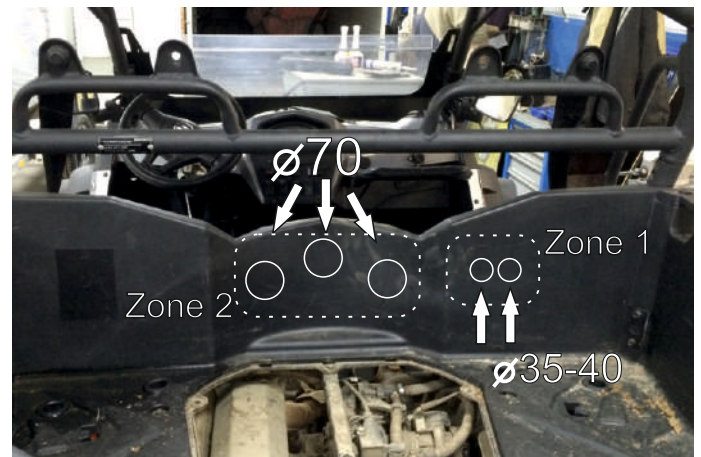

Mark a place for the radiator hoses and snorkel inside the zones showed. Drill a holes.



Take the air intake tube



Saw the air intake tube as the sample



Connect the corrugation with a piece of air intake tube




Saw the intake variator tube as the sample



Push through the rear panel



Lay the corrugation as shown

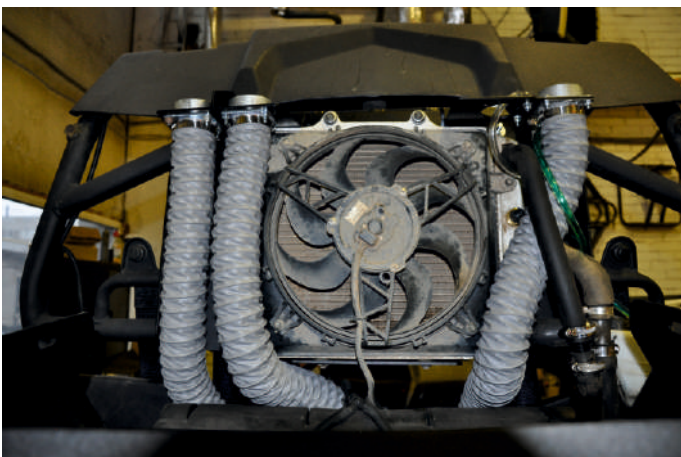

Assemble corrugations on relocation box



Tighten the relocation box cover