

# Manual for installation

## Radiator relocation kit and snorkels kit

CFMOTO X5H.O.  
CFMOTO X6EPS  
CFORCE550  
CFORCE600


MP0388 - Radiator relocation kit  
MP0387 - Snorkel kit




Remove the front rack panel



Remove the seat and fuel tank panel

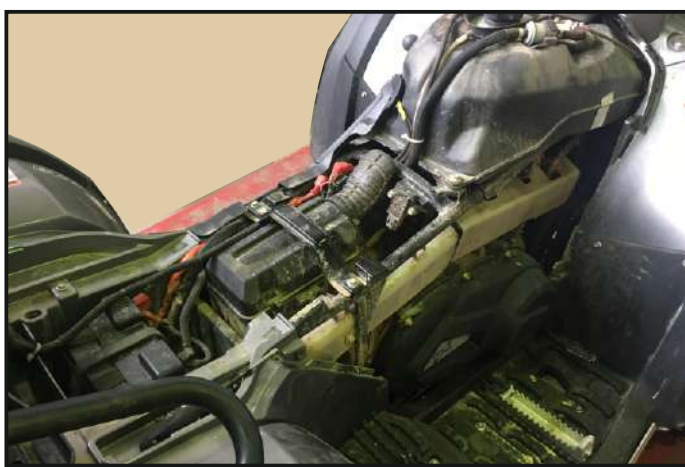

Remove the right side panel

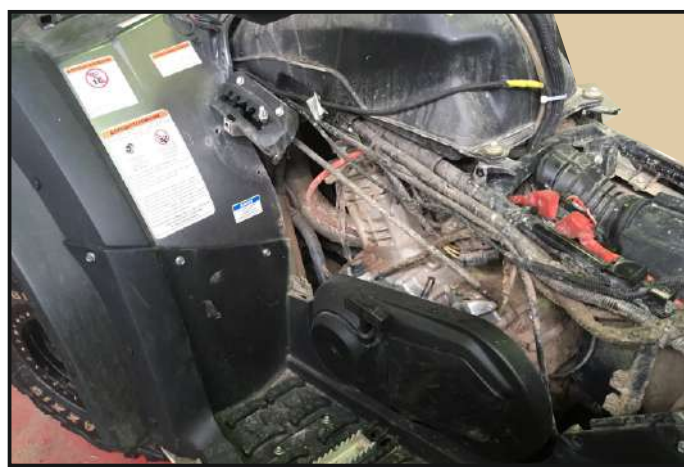


Remove the left side panel



Remove the back cover of the headlights



Remove the hose. Drain the antifreeze

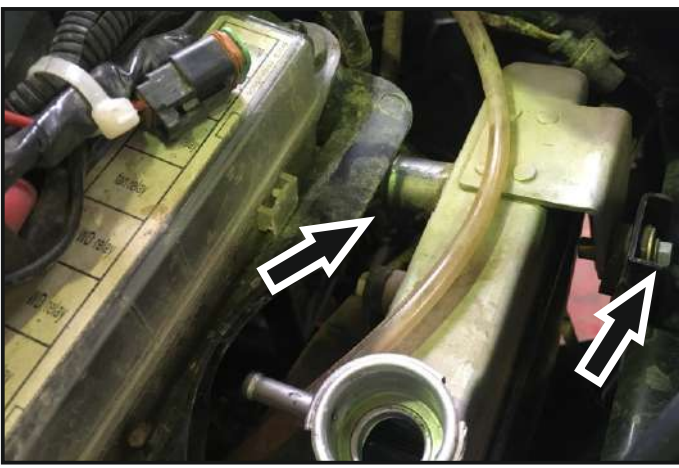

Remove upper hose. Unscrew the radiator mount



Unscrew the radiator mount bolt




Clean the radiator



Wash the radiator



Install the brackets on the radiator

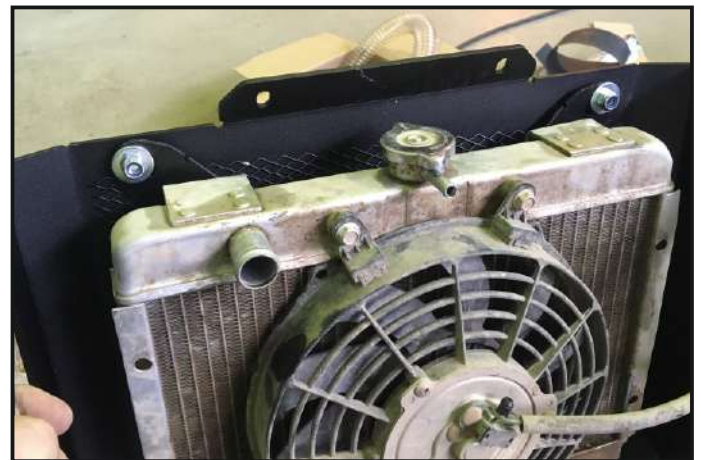

Fix the radiator to the relocation box




Take rear variator air intake tube



Saw the air intake tube as the sample



Connect the corrugations with a piece of air intake tube

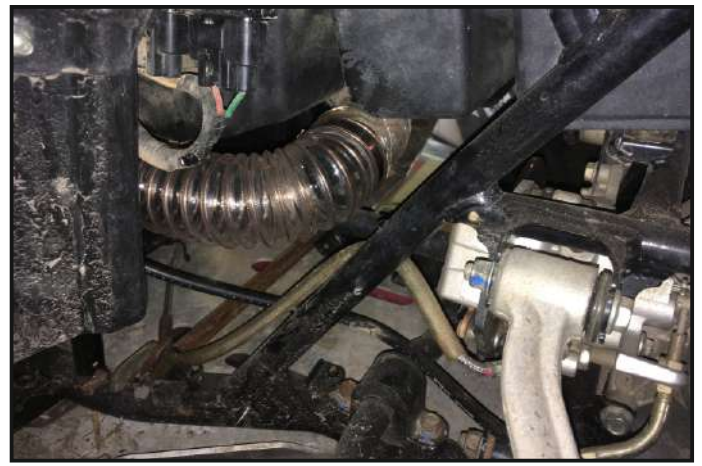

Lay the corrugation from the rear variator housing



Install heat shrink tube along the engine



Saw part of the rear air intake tube as the sample




Install the adapter on the air intake tube part




Saw part of the rear air duct as the sample



Install the adapter to the air filter housing

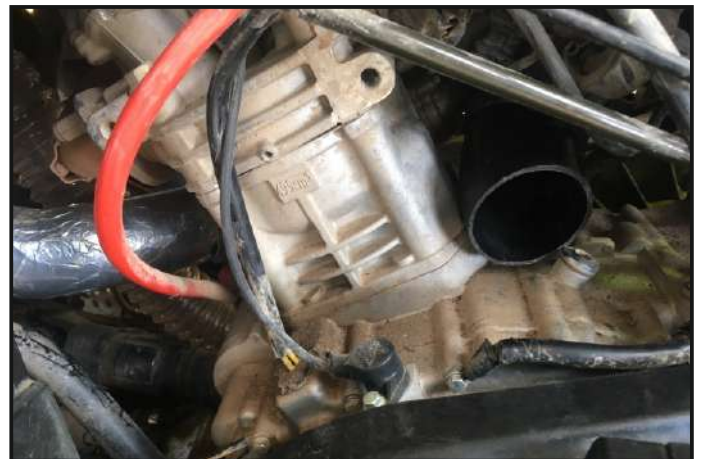

The location of the adapter

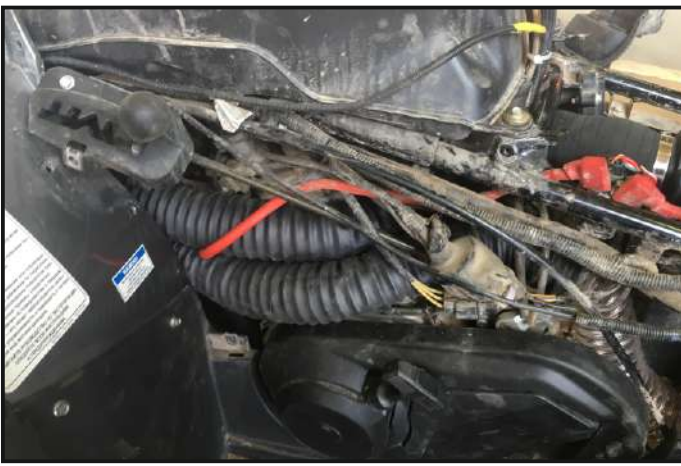

Lay two corrugations along the engine



Saw the front air duct as the sample




Connect the corrugations with a piece of air intake tube



install the housing brackets of relocation box




Cut out part of the front rack panel

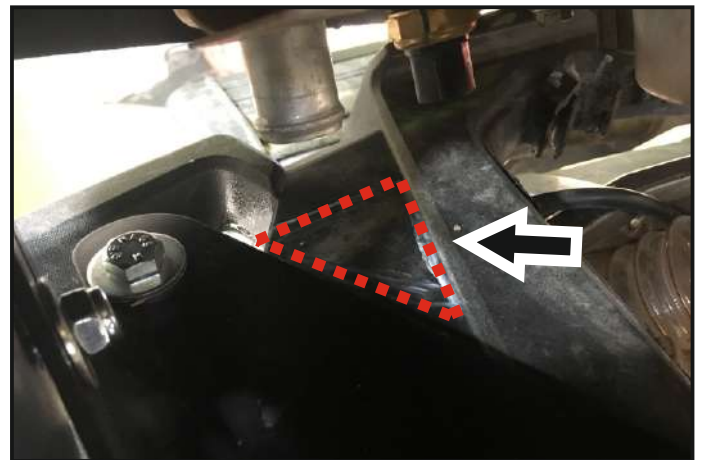

Mark a place for the radiator hose



Drill a hole in the front rack panel lid d55-60mm

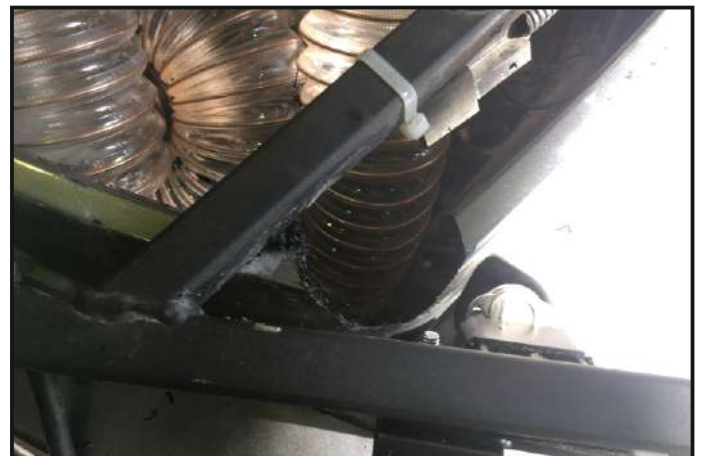

Drill a hole in the plastic panel d55-60mm



Install the straight hose from relocation kit MP0388



Install the bushing



Install and tighten the radiator relocation box



Install the bent hose on the radiator



Install the corner connector



Install the corrugation on the snorkel head

